

THANK YOU for choosing Smith+Noble. We recommend that you read through all the instructions before you start. If you have questions, our customer service representatives are available from 6am to 6pm Mon-Fri and 7am to 4pm Sat Pacific time at 800.780.8889.

REMOVE the hardware from the packaging.

Note: Do not dispose of packaging until the hardware is operating to your satisfaction. Check the diagram to make sure you have all the parts indicated.

QUICK PROGRAMMING GUIDE

BEFORE YOU BEGIN

It is recommended to power only the motor being programmed (disconnect power to all the other motors).


Motor will exit programming mode after 2 minutes of inactivity.





ADJUSTING THE LIMITS


TO CHANGE THE LOWER LIMIT send the motor to its current lower limit. Press both  and  at the same time until the motor jogs.

Adjust to a new lower limit position.

 
Press  until the motor jogs.


TO CHANGE THE UPPER LIMIT send the motor to its current upper limit press both  and  at the same time until the motor jogs.

Adjust to a new upper limit position.


Press  until the motor jogs.

SETTING AN INTERMEDIATE POSITION

Send the shade and stop it at the desired intermediate position by pressing .



Once the desired Intermediate position is reached, Press and hold  until the shade jogs. The Intermediate position is now added to memory.

USING

Send the shade to the intermediate position by pressing  from ANY shade position.

Note: Shade should be stationary prior to activating intermediate position function.

NOTE

If shade is actively moving (in-motion)  Should be pressed twice. To Delete: Activate shade to intermediate position, then press and hold  for 5 seconds. Shade will jog to confirm deletion.

ADDING OR DELETING A TRANSMITTER OR A CHANNEL

STEP 1

Using already programmed transmitters select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter.

STEP 2

Press and hold the programming button of the transmitter until the motor jogs.

STEP 3

Select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter, to be added or deleted.

STEP 4

Press and hold the programming button of that transmitter until the motor jogs.



BACK OF REMOTE

RESETTING PREVIOUS SETTINGS

Press and hold the PROGRAM button using a paper clip (approximately 15 seconds) until the LED blinks then extinguishes.

All transmitters and limits will be erased. (Motor is now reset). Motor limits will need to be reestablished.



BACK

smith+noble®

America's Leading Resource for Window Treatments®

Motorization

Step by Step Programming

Customer Service 800.780.8889 or visit us online at smithnoble.com



Warranty

All Smith+Noble hardware is designed for a lifetime of trouble-free use and is covered by a limited lifetime warranty. This warranty applies to the original customer/installation with proof of purchase and covers any defects in materials or workmanship provided that the product is measured and installed according to the product instructions.

In the unlikely event that warranty service is ever needed, simply call Customer Service at 800.780.8889. Our customer service representatives will arrange for a repair as quickly as possible.